

# MARSHMALLOW DOUBLE SHOOTER™ INSTRUCTIONS

## LOADING *(Always use fresh marshmallows)*

**1. Remove marshmallow magazines:** Lift each magazine tubes up and out of the rear grip and pull them backwards to remove.

**2. Load marshmallows:** Fill the magazines with mini-marshmallows, flat side down to prevent jams.

**3. Replace magazines:** Re-insert the open end of the loaded magazines into the manifold inserts and push firmly to create a vacuum. Press the magazines into the rear grip until they snap into place.

## SHOOTING

**1. Load chambers:** Point the Double Shooter downwards, and pull the handgrip to the back position.

**2. Fire marshmallows:** Aim at target and push the rear handgrip forward quickly to shoot, repeating until the magazine is empty. Rapid fire marshmallows with a swift backwards and forwards motion.

## CLEANING

**1. Empty magazines:** Lift magazine tubes out and remove unfired marshmallows.

**2. Wash magazines:** Place magazine tubes in the top rack of a dishwasher or if hand-washed, please don't scratch the inside surface.


**3. Remove barrels:** Twist the barrels counter-clockwise and pull to remove, wash with hot water.

**4. Dry completely:** Remove all moisture before reloading magazine tubes to keep marshmallows from swelling and clogging the Double Shooter.


## ⚠ WARNING

Do not shoot into mouth, eyes or face.  
Do not modify Shooter or use if damaged.  
Shoot marshmallows only. Do not try to shoot anything other than marshmallows.  
Do not eat marshmallows after shooting.

## LOADING

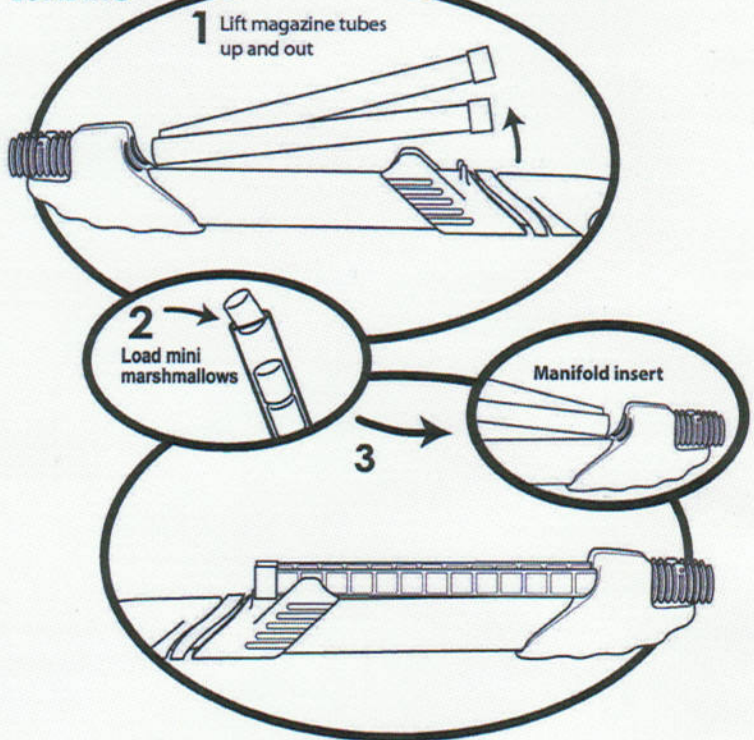

## SHOOTING

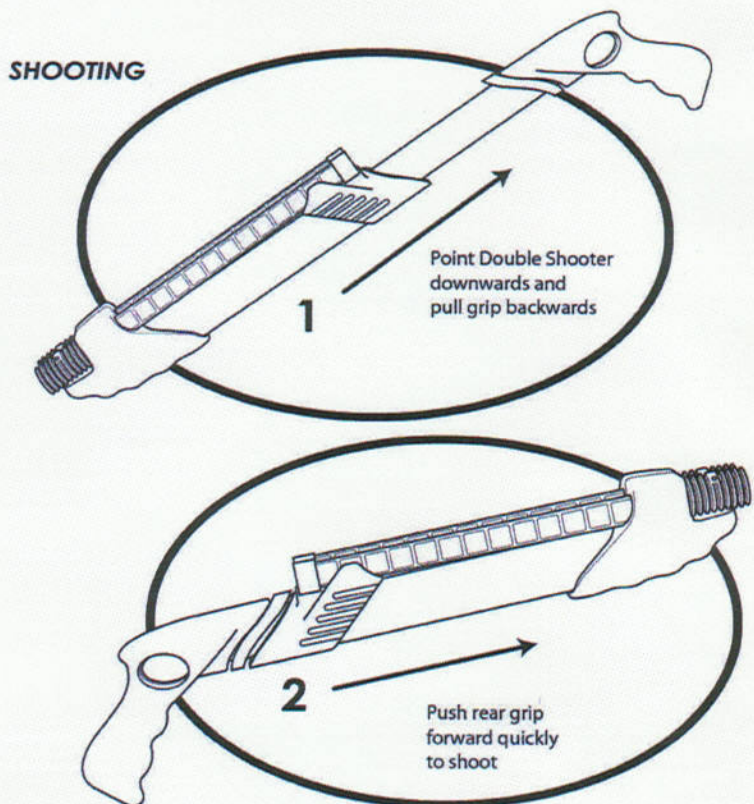

Marshmallow Fun Company wants every customer to be a happy one.  
For support or questions, call toll-free 877.894.6073

**MARSHMALLOW FUN COMPANY, LLC**

2544 Elm Street, Suite 200 Dallas, Texas 75226 877.894.6073

fax 214.741.1384

[www.marshmallowville.com](http://www.marshmallowville.com)

071910